


EMCO SPECIALTY PRODUCTS, INC.



408 MIAMI AVE. KANSAS CITY, KS 66105 - 913-281-4555 / FAX. 913-281-4554

HOOK PANEL INSTALLATION INSTRUCTIONS


1. DETERMINE THE LOCATION AND HEIGHT OF YOUR UNIT. (GENERALLY 65" FROM THE CENTER OF THE PANEL TO THE FLOOR.)
2. DRAW A LINE APPROXIMATELY 12 TO 16" LONG WITH A LEVEL AT THE DESIRED HEIGHT. USE THIS LINE AS THE POSITION FOR THE BOTTOM OF THE WALL MOUNTED CONCEALED FASTENER . MEASURE THE DISTANCE BETWEEN THE TWO FASTENERS ON THE PANEL THEN REPLICATE THIS DISTANCE FOR THE PARTS FOR THE WALL.
3. IF THE WALL HAS SUFFICIENT BLOCKING BEHIND IT USE THE 1 1/4" SCREW PROVIDED TO FASTEN THE FASTENER STRIP TO THE WALL. IF THERE IS NO BLOCKING, YOU WILL NEED TO SECURE THE STRIP USING TOGGLE BOLTS (NOT PROVIDED)
4. INTERLOCK THE WALL MOUNTED FASTENER STRIP AND THE PANEL STRIP.
(DRAWING 1) CHECK THE PANEL TO MAKE SURE IT IS LEVEL.
5. REMOVE THE PANEL FROM THE WALL AND PEEL THE BACKING FROM THE ADHESIVE STRIP. REPOSITION THE PANEL IN THE INTERLOCKING POSITION BEING CAREFUL TO KEEP THE ADHESIVE STRIPS AWAY FROM THE WALL UNTIL THE PANEL IS IN ITS FINAL LEVEL POSITION.



DRAWING #1

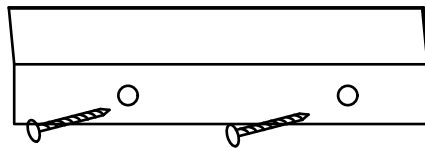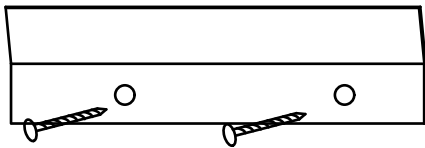

CONCEALED FASTENER STRIP MOUNTED TO WALL

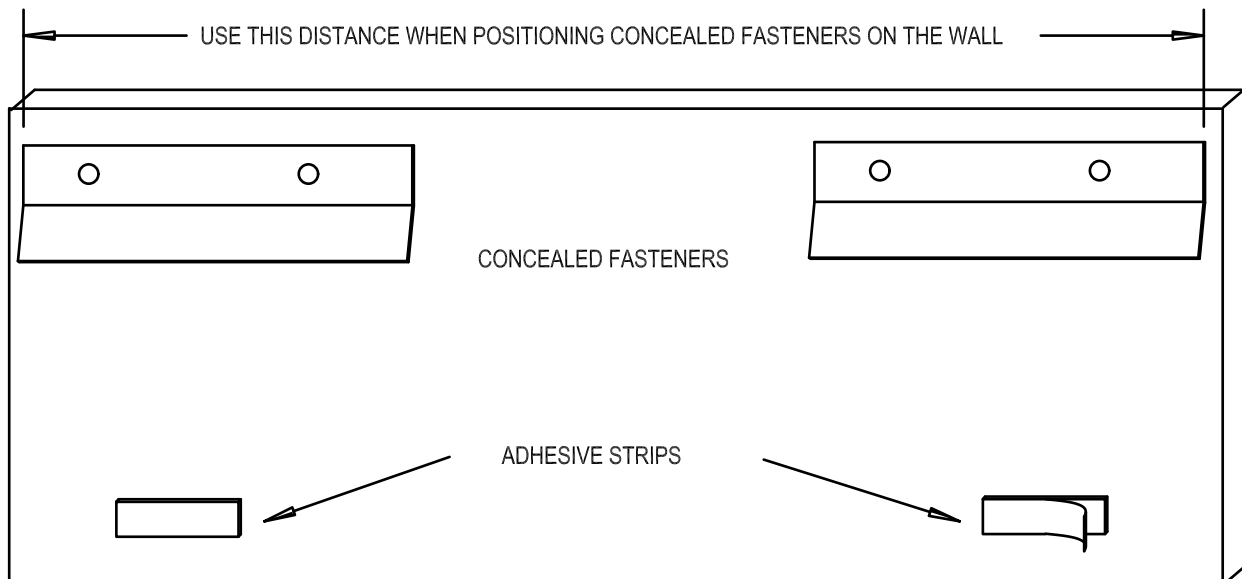

BACK OF PANEL