


EMCO SPECIALTY PRODUCTS, INC.

408 MIAMI AVE. KANSAS CITY, KS 66105 - 913-281-4555 / FAX. 913-281-4554

W HOOK STRIP INSTALLATION INSTRUCTIONS

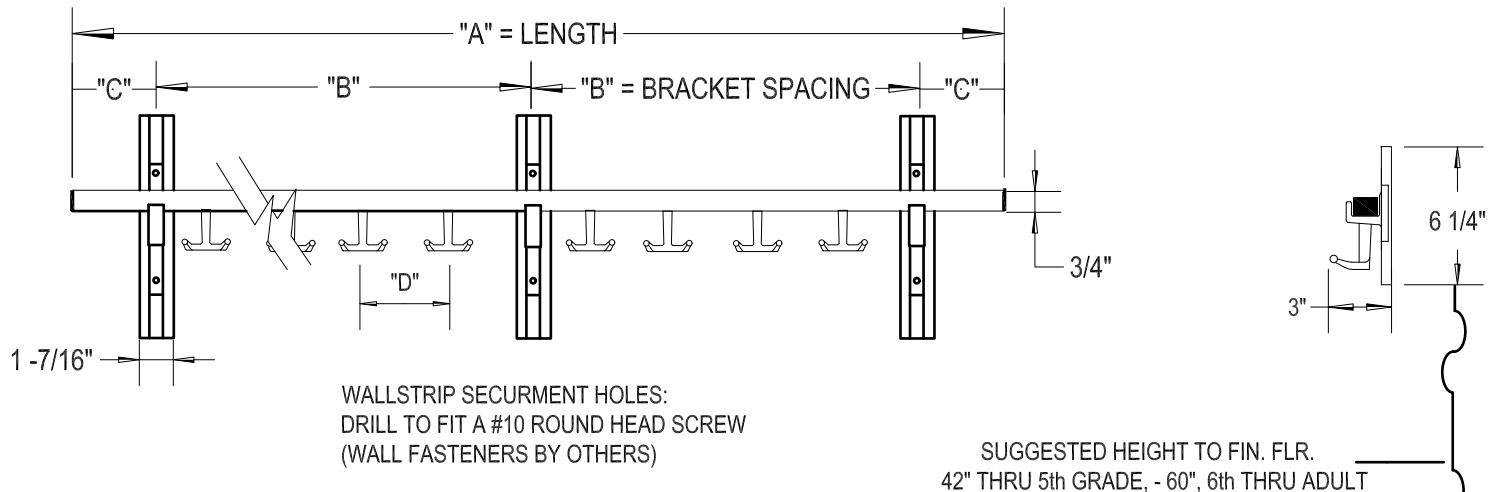

1. DETERMINE LOCATION AND HEIGHT OF WALL STRIP (SEE NOTES ON SUGGESTED HEIGHT).

2. MARK LOCATION OF WALL STRIP ON THE WALL USING A CARPENTERS LEVEL TO ENSURE THEY ARE INSTALLED AT THE SAME LEVEL AND PERPENDICULAR TO THE FLOOR. BRACKET SPACING "B" IS LISTED ON THE CUSTOMER COPY OF THE PICKING TICKET AND MUST BE ADHERED TO FOR PROPER SHELF SUPPORT.

3. PREPARE HOLES AND MOUNT AS FOLLOWS: (FASTENERS BY OTHERS - SEE DRAWING #1).

A. FOR WALLS WITH WOOD STUDS - PREDRILL A 5/32" HOLE 1 1/2" DEEP AND ATTACH WITH #10 X 1 3/4" PAN HEAD WOOD SCREW.

B. FOR WALLS OF HOLLOW MATERIAL SUCH AS TILE - USE 3/16 SPRING WING TOGGLE AND ATTACH WITH 10-24 X 3" PAN HEAD BOLT.

C. FOR WALLS OF SOLID MATERIAL SUCH AS CONCRETE, BRICK, STONE, ETC, USE A #10 DEDICATED MASONRY SCREW A MINIMUM OF 1 1/2" LONG.

4. INSERT THE ROUND BASE WELD NUTS THROUGH THE 2 BRACKET HOLES (SEE DRAWING #2). SCREW IN THE 10-24X5/8" PHIL PAN HEAD SCREW IN THE BOTTOM HOLE ONLY. DON'T LET THE SCREW POINT PROTRUDE BEYOND THE WELD NUT BASE. POSITION BRACKET IN THE PRE HUNG WALL STRIP AND TIGHTEN THE BOTTOM SCREW ONLY. THE BRACKET SHOULD HAVE BOTH WELDNUTS IN PLACE BUT ONLY THE BOTTOM BRACKET SCREW SECURED. THE TOP SCREW WILL BE INSTALLED IN STEP 6 AFTER SLAT IS INSTALLED.

DO NOT OVER TIGHTEN THE SCREW AS IT MIGHT SHEAR THE SCREW HEAD. (IF THE WELD NUT BASE STARTS TO SPIN DURING TIGHTENING, INSERT A FLAT HEAD SCREW DRIVER UNDER THE BASE TO PREVENT MOVEMENT).

5. INSERT THE HOOKED SLAT INTO THE NOTCH IN THE HOOK STRIP BRACKET. SECURE SLAT BY INSERTING #8 X 3/4" SCREW IN PROPER HOLE UNDER BRACKET, AND TIGHTENING WITH PHILLIPS HEAD SCREWDRIVER. WHEN TIGHTENING SLAT TO BRACKET, THE SLAT SHOULD BE HELD TIGHT TO THE BRACKET WITH YOUR HAND. THIS WILL INSURE PROPER SEATING.

6. INSERT THE #10-24 X 5/8" PHIL PAN SCREW IN THE TOP HOLE OF EACH BRACKET AND TIGHTEN.

CAUTION: DO NOT OVER TIGHTEN THE SCREWS SECURING THE SLAT AS IT WILL STRIP THE SCREW AND PREVENT IT FROM HOLDING THE SLAT IN PLACE.

7. INSERT WALL STRIP END PLUGS AND CLEAN ENTIRE SHELF WITH A SOFT CLOTH.

WALL FASTENERS BY OTHERS

DRAWING #1

DRAWING #2